

# BUNN®

## Tiger Cool Froth EXT Cleaning Card

### Required Supplies:

36000.1189 Cafiza Tablets (ea)  
36000.1188 Cafiza Tablets (cs of 12)  
04238.0000 Cleaning Pitcher

39265.0000 Rinza Cleaner (ea)  
39265.0001 Rinza Cleaner (cs of 6)  
Clean Paper Towels

To order cleaning supplies call Bunn® at 800-626-2866

### Cleaning



Open POD holder. Move white switch to the left position.



Place one Cafiza cleaning tablet in the pod holder.



Close pod holder and lock in place.



Raise the pod holder.




Remove and empty the grounds drawer.



Place grounds drawer sideways on the drip tray.



Pour 1 oz (30 ml) of Rinza into a ½ gallon cleaning pitcher.

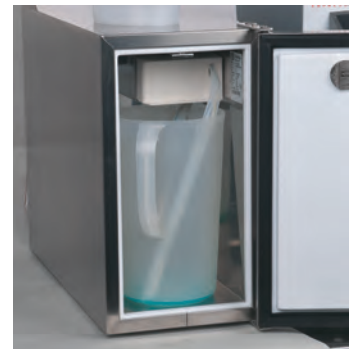

Remove both sets of draw tubes from milk containers, wipe thoroughly and place into cleaning pitcher, making sure tubes touch the bottom of the pitcher.



Press the Rinse key and allow the Tiger to cycle through 4 soap and soak cycles. (Allow approx. 8 min)



When prompted, empty the cleaning pitcher, rinse and place the tubes back into the pitcher.



Press the rinse key – the Tiger will cycle through 2 clear water rinse cycles (6/6 total).

## Cleaning (continued)




When prompted, dump the water collected in the grounds drawer.



Rinse the grounds drawer and set aside.



Unscrew the labyrinth from the Thermoblock. (counter-clockwise motion)

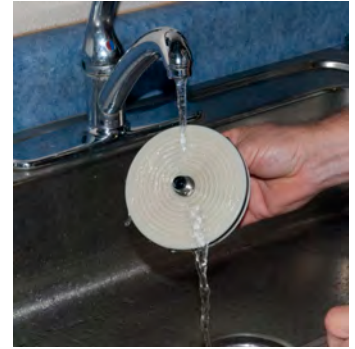

Wash the labyrinth under clean running water.



Wipe the Thermoblock with a clean paper towel.  
**CAUTION:** Do not scour. You will remove the protective coating.



Reinsert and tighten the labyrinth (clockwise motion) and replace grounds drawer.



Wipe out grounds drawer base area.



Press the rinse key to complete the clean cycle.



Open the pod drawer and move the white switch to the right.



Reinsert the draw tubes into the milk containers.



Screen as shown above will appear when cleaning is complete.